KANDY-VAN

T246601

IMPORTANT!
READ THESE POINTS BEFORE YOU BEGIN

1. This kit may be built more than one way. Decide on which version you wish to build before final assembly.
2. "TEST FIT" all parts before cementing. Cement all parts unless otherwise indicated by the instructions.
3. Use paint and cement made for styrene plastic. Trim excess plastic from parts before joining.
4. Paint all sub-assemblies before attaching chrome parts.
5. Scrape chrome and paint away from surfaces to be cemented together.
6. Follow all of the numbers on the instruction sheet.

1. ENGINE

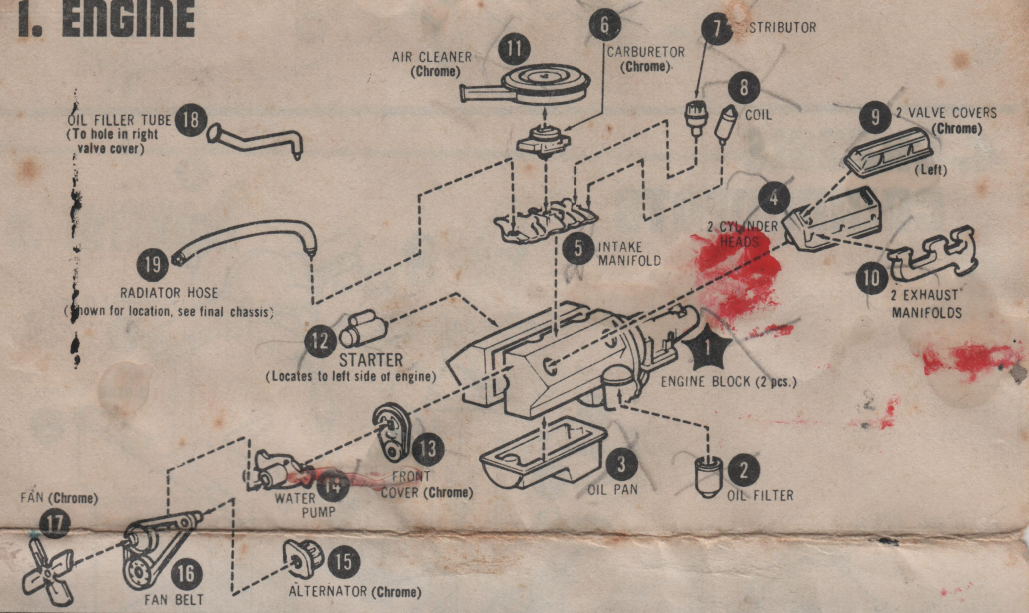

2. WHEELS

STOCK

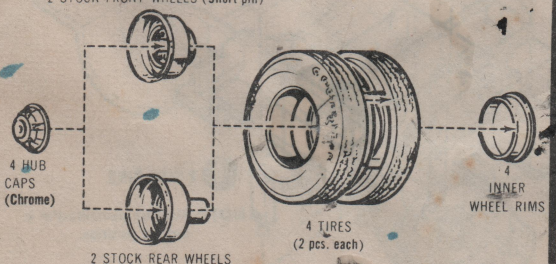

CUSTOM

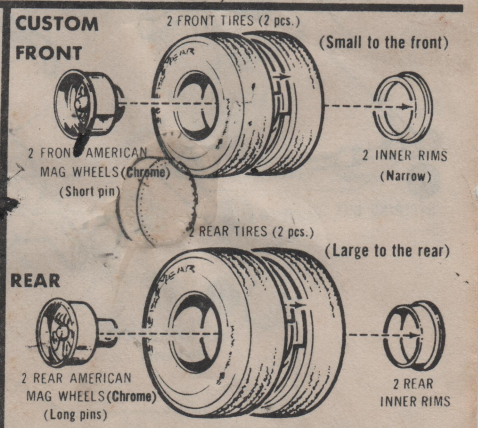
FRONT
2 FRONT TIRES (2 pcs.)
(Small to the front)
2 FRONT AMERICAN MAG WHEELS (Chrome) (Short pin)
2 INNER RIMS (Narrow)
2 REAR TIRES (2 pcs.)
(Large to the rear)
REAR
2 REAR AMERICAN MAG WHEELS (Chrome) (Long pins)
2 REAR INNER RIMS

3. BASIC CHASSIS

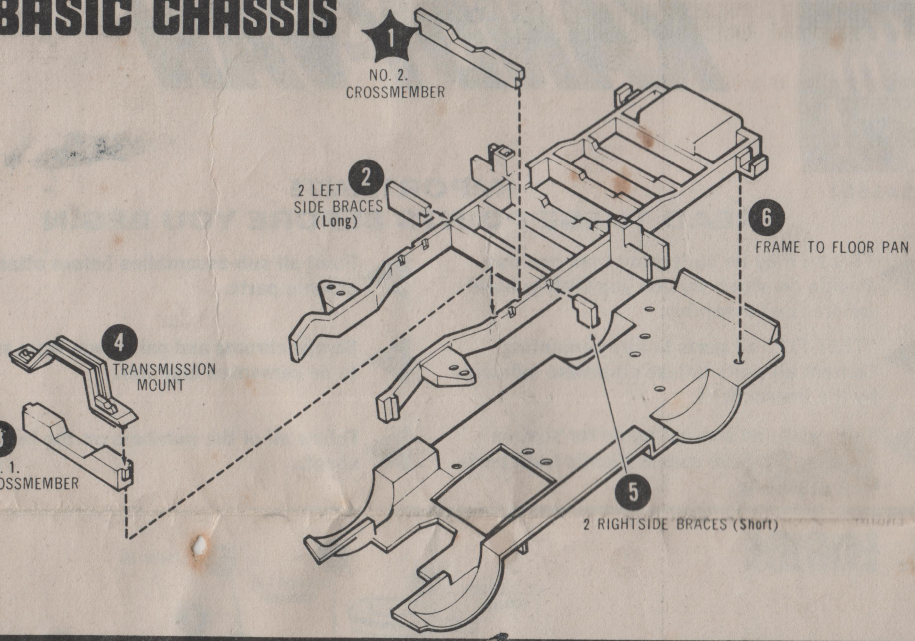

4. CHASSIS COMPONENTS

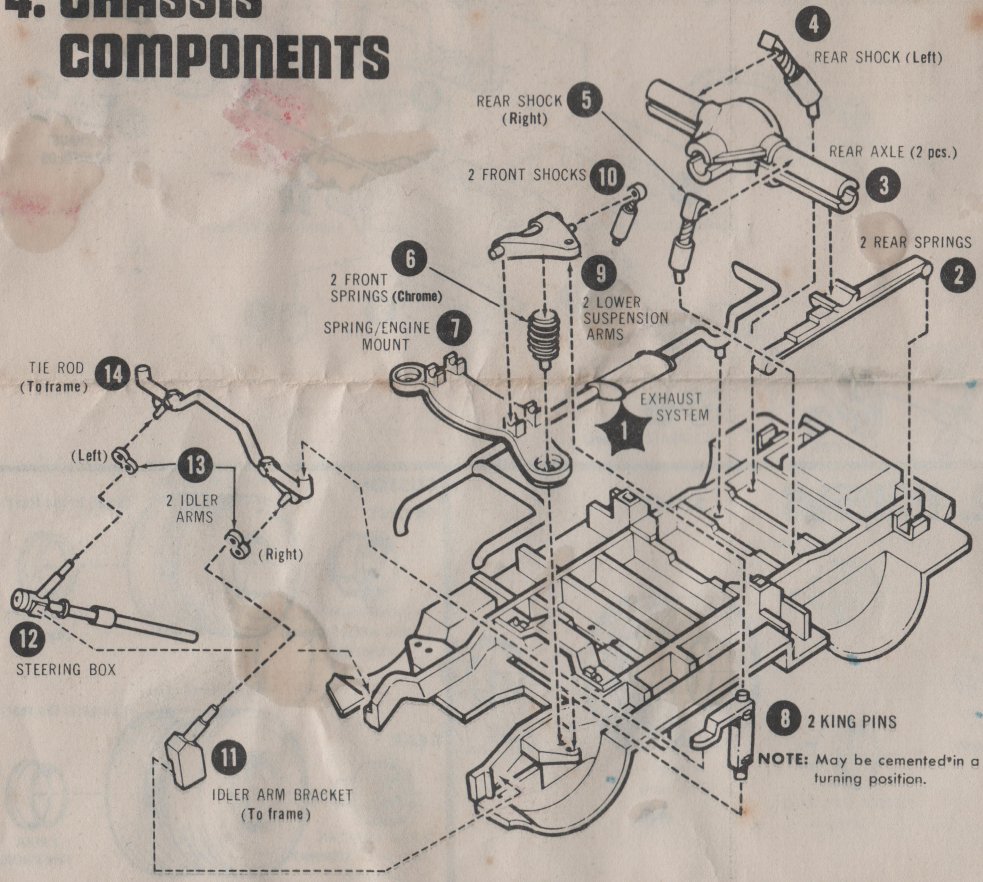

5. FINAL CHASSIS

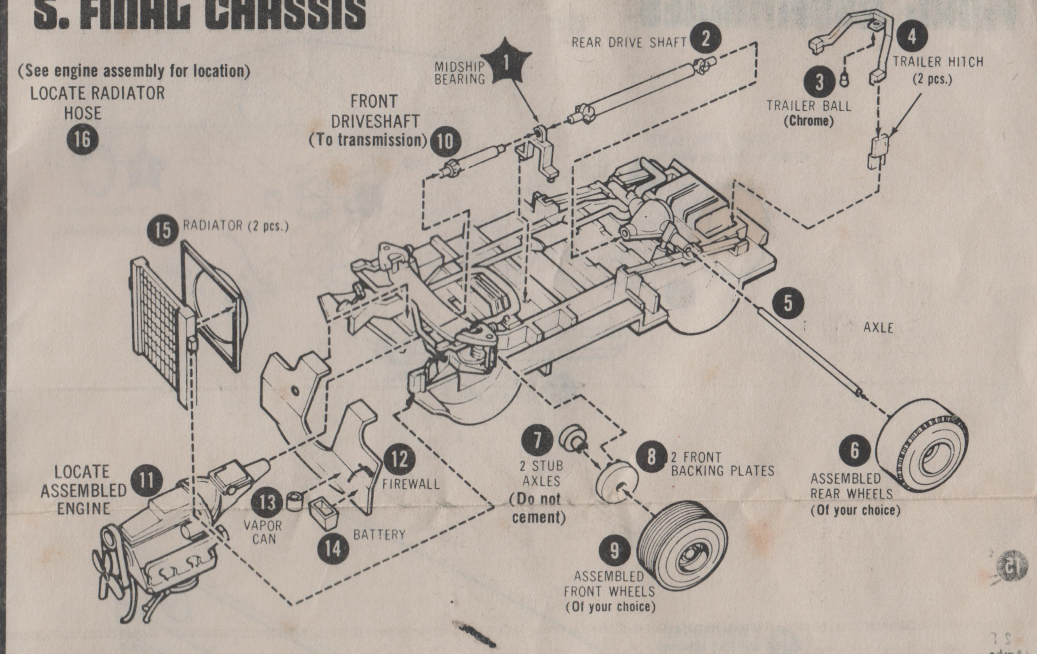

6. INTERIOR

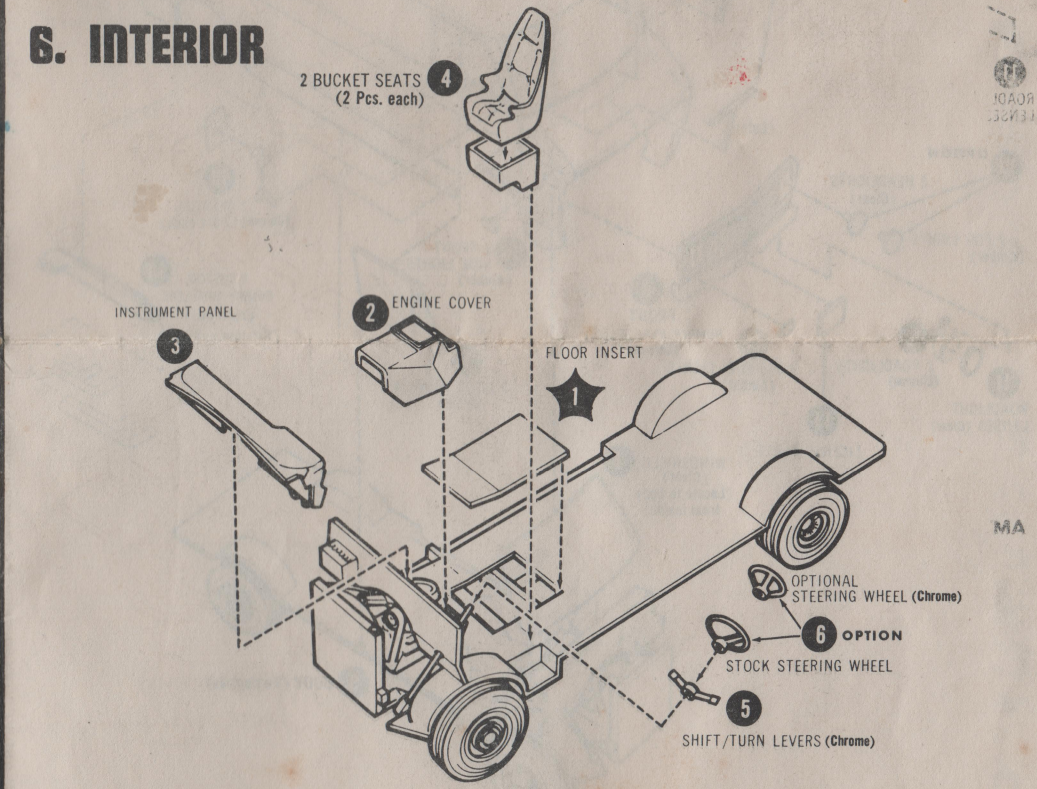

FINAL ASSEMBLIES

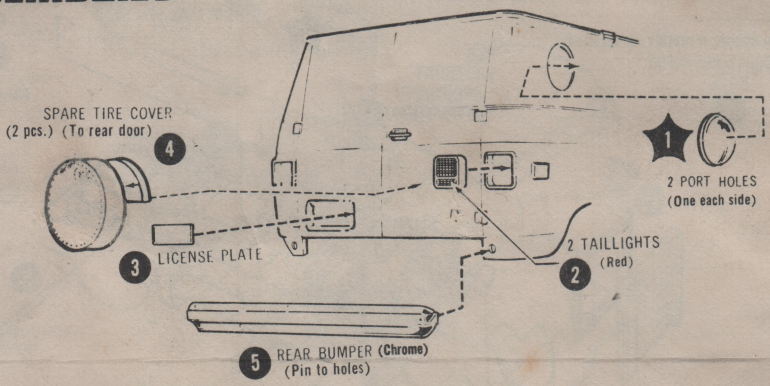

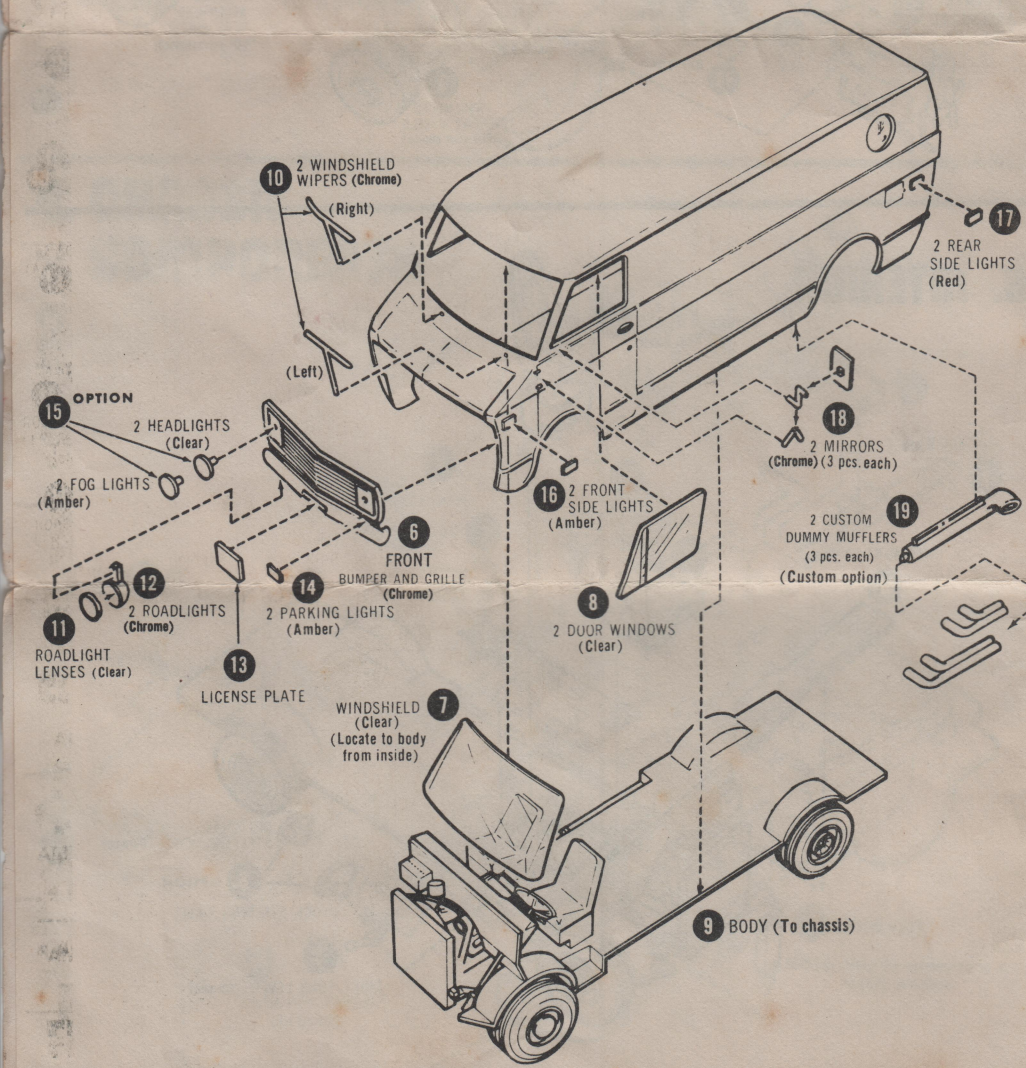

AMT corporation, 1225 E. MAPLE, Troy, Michigan 48084

PRINTED IN USA